

If you have questions or need assistance, please call our warranty/repair facility at 01 (909) 947-1006.

Problem

Cause/Correction

Flashlight:

Does not light

1. Tighten tail cap – make sure unplated area of tail cap and barrel are clean. See fig. 14
2. Check if battery is installed ... see page 8.
3. Check if battery is installed with (+) positive end toward head of flashlight.
4. Make sure large end of battery spring is snapped into tailcap.

Battery charged?

1. Check battery charge: Place flashlight in recharger/cradle. Make sure LED lights up with flashlight switch off (see page 8). Charge for 15 minutes ... check for light. If it lights (even momentarily) charge it, if not, replace it (battery).

Switch sticks

1. Return flashlight to Mag Instrument (see warranty).

Works intermittently

1. Check for damage to battery casing.
2. Foreign particles inside barrel.

Poor or no spot

Recharger/Cradle:

LED indicator does not light when flashlight switch is in off position.

1. Damaged LED.
1. Tighten tail cap.
2. Check plug connection to converter.
3. Check plug to power source.
4. Make sure large end of battery spring is snapped into tailcap.

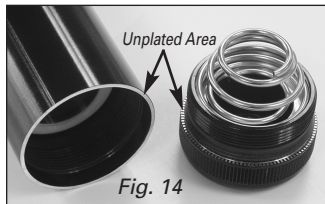


Fig. 14