

## Inspection and Maintenance

**Battery Pack** – See Warnings Section for more information. Periodically (approximately every month) remove the battery pack from the flashlight and visually inspect for signs of gas or chemical leakage. Indications of leakage are discoloration of the plastic sleeve or white fuzzy material near the top (positive side button) of each cell. Another indication would be a bulging deformation of the bottom (negative flat end) of the cell can. If these signs are observed the battery pack should be removed from service to prevent chemical damage to the inside of the flashlight. **See One Year Battery Pack Warranty for more information concerning warranty coverage.**

**Fully Charged Battery Storage** – If you do not use your flashlight for long periods of time (four months or more) we suggest you remove the battery pack from the flashlight to prevent chemical damage (acid leaks). **Electrical Contacts** – The bare (bright) metal surfaces between the tailcap and barrel must be cleaned periodically to ensure a good electrical contact. Also keep the tailcap spring clean. **O-ring Seals and Screw Threads** – To keep seals from drying out and the threads operating smoothly, apply several drops of clean petroleum oil or jelly to these surfaces two or three times a year. **Anodized Exterior Finish** – The protective finish on the flashlight is very durable; however, constant exposure to sunlight, water, chemicals, gases, etc., will dull, discolor and eventually destroy the protective finish. Care should be taken to avoid any harsh environment.

