

If you have questions or need assistance, please call our warranty/repair facility at 01 (909) 947-1006.

## Problem

## Cause/Correction

### Flashlight:

*Does not light*

1. Tighten tail cap – make sure unplated area of barrel is clean.  
See fig. 1

*Battery charged?*

1. Check battery charge: Place flashlight in charging base. Make sure LED lights up with flashlight switch off. Charge for 15 minutes ... check for light. If it lights (even momentarily) charge it, if not, replace it (battery).

*Switch sticks*

1. Return flashlight to Mag Instrument (see warranty).

*Works intermittently*

1. Check for damage to battery casing.
2. Foreign particles inside barrel.

*Poor or no spot*

1. Damaged LED.

### Recharger/Cradle:

*LED indicator does not light when flashlight switch is in off position.*

1. Tighten tail cap.
2. Check plug connection to converter.
3. Check plug to power source.

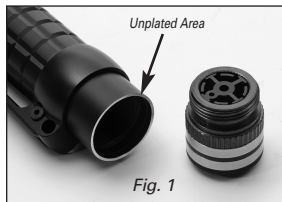


Fig. 1