

**TROUBLESHOOTING:** If flashlight does not turn on or stay on -

1. Check the lamp and the batteries. If lamp has burned out or batteries have run down, replace. (To replace the lamp: Find the spare lamp in the tailcap. Unscrew the head to detach. Gently pull lamp straight from socket. Make sure new lamp pins are straight; insert them straight into socket. Do not twist the pins together. If lamp and batteries are not the problem, then 2. Check the tail cap. The metal surfaces contacting the barrel, tail cap and spring assembly should be clean, shiny and free of corrosion or other obstruction. Clean as needed. 3. If the flashlight still does not operate properly, see the tips at [www.maglite.com](http://www.maglite.com)>customer service> [click on image of your flashlight]>frequently asked questions. If this does not resolve the problem, see the “How and When to Make a Warranty Claim” section.