

## **INSPECTION AND MAINTENANCE:**

For prolonged life and efficiency, it is necessary periodically to inspect and perform preventative maintenance on your flashlight as follows:

1. Inspection - Any battery may leak caustic solutions or gases which can corrode the inside of your flashlight. You should remove the batteries at least once a month and visually inspect the inside of the flashlight for signs of corrosion. If corrosion is seen, follow the instructions in the How and When to Make a Warranty Claim section.
2. Separate Storage of Batteries - If your flashlight is used infrequently, e.g., once a month or less, it is recommended to remove the batteries and store them separately. This helps guard against corrosion and may also prolong battery life.
3. Maintenance - Place a small amount of petroleum jelly on all threads and rubber lip seals every six months.

