

TROUBLESHOOTING GUIDE: If flashlight does not turn on or stay on -

1. Check the batteries. If using alkalines and they are exhausted, replace. If using the NiMH battery pack, recharge it.
2. Check the tail cap. Make sure it is fully tightened. The metal surfaces contacting the barrel, tail cap and spring assembly should be shiny metal without obstruction between them. Any corrosion formed by a foreign substance should be carefully removed.
3. If all of the above steps have been followed and the flashlight still does not perform properly, follow the steps in the How and When to Make a Warranty Claim section, or see the Customer Service Section at [www.maglite.com](http://www.maglite.com) or contact our Warranty/Repair facility: Tel: 01 (909) 947-1006, Fax: 01 (909) 947-5041.

